


NOTE:
 REMOVE ALL BURRS AND POLISH CONDUIT SURFACE
 BEFORE MOUNTING. FAILURE WILL RESULT IN DEFORMITIES IN SKIN.

REVISIONS		DATE
REV.	DESCRIPTION	
A	INITIAL RELEASE	

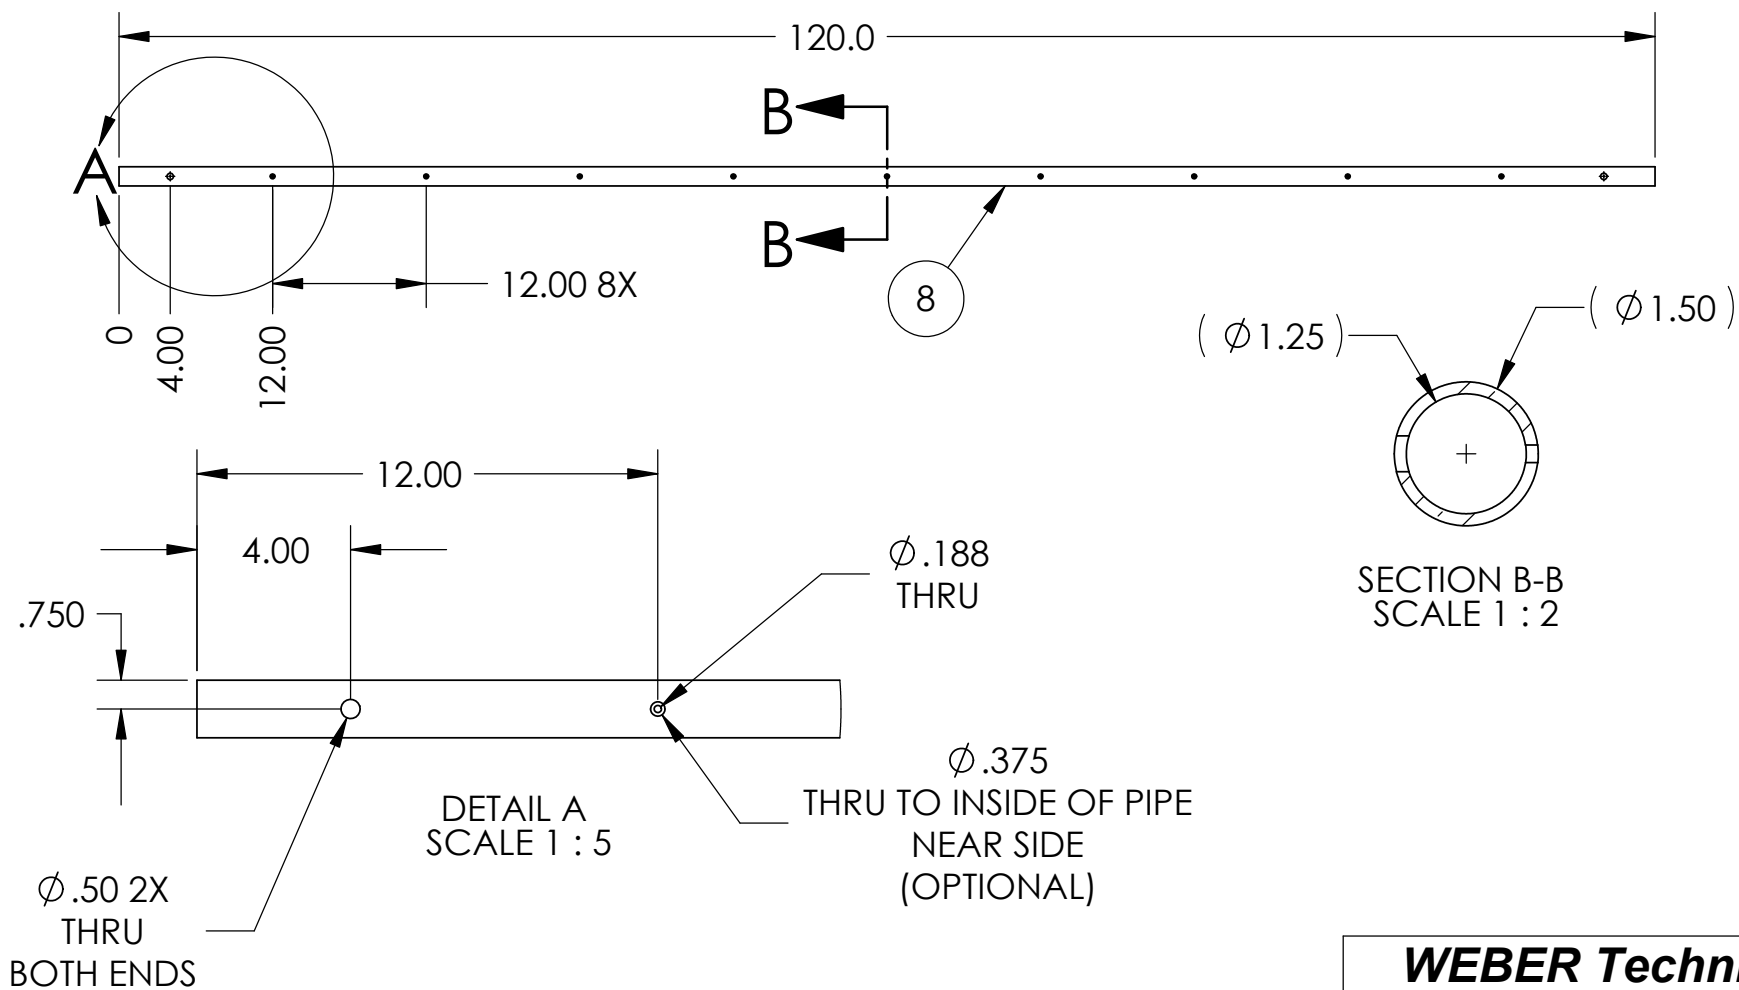

WEBER Technical

TITLE:
 1 1/4" EMT CONDUIT
 SPICER PRESS

SIZE A	DWG. NO. SSP-004	REV A
------------------	----------------------------	-----------------

SCALE: 1:10 | DATE: 09/07/05 | SHEET 4 OF 7